



Aufbauanleitung Ziegeljack XXL

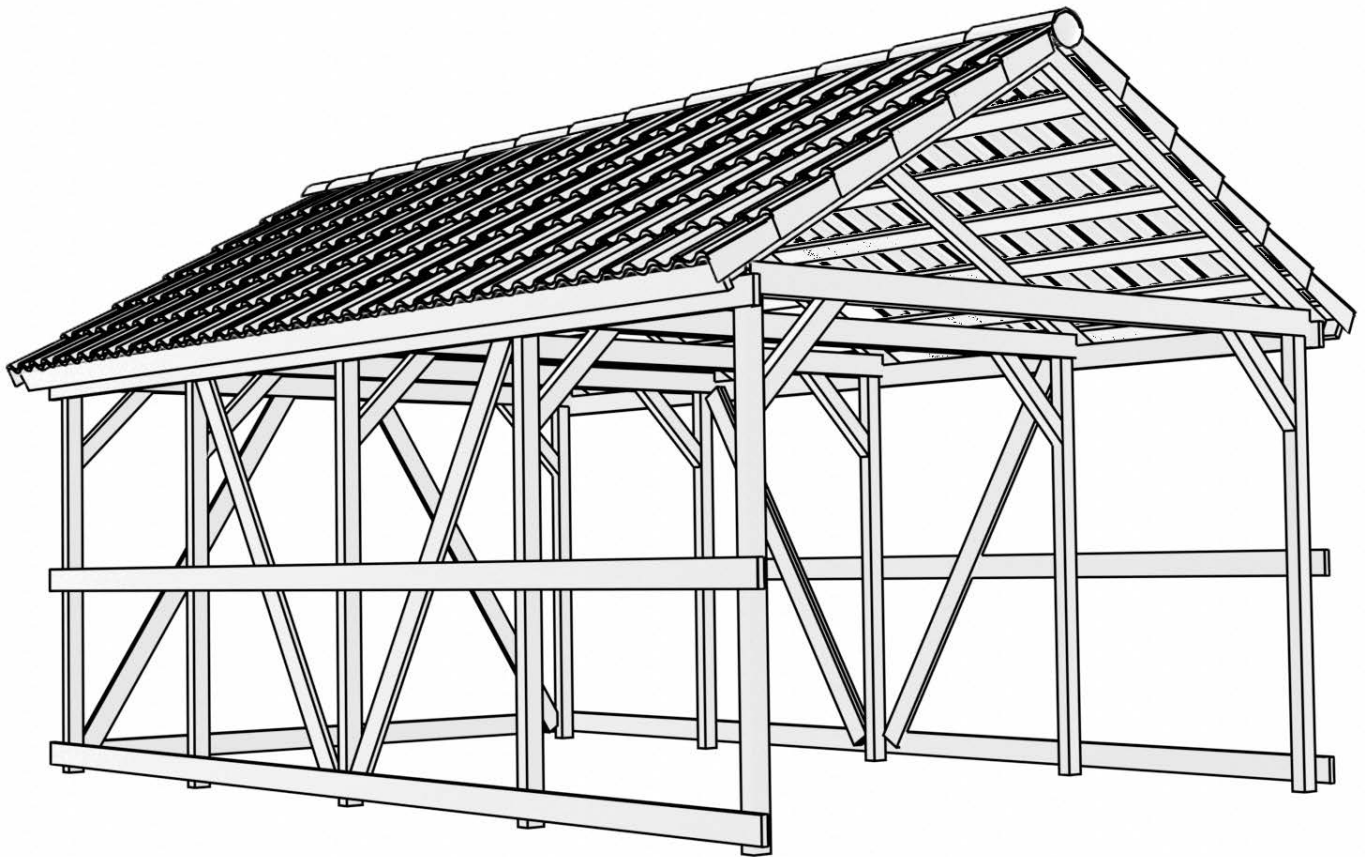


Versionsnummer: 0.1.7

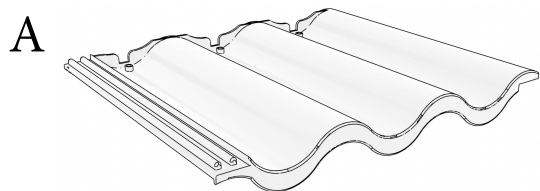





156 x

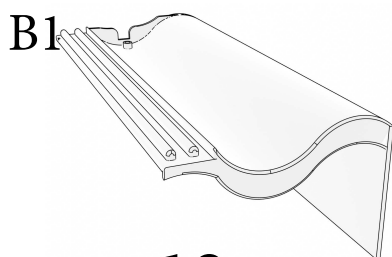


12x

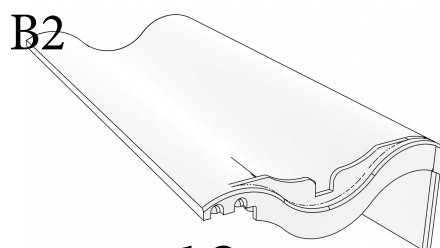


12x

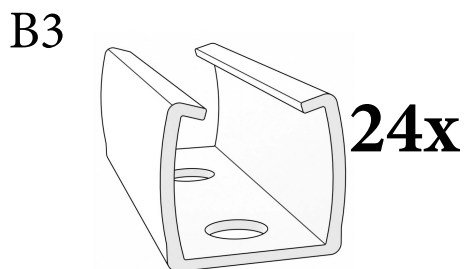


24x

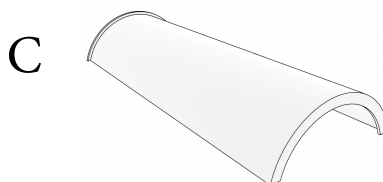


12x

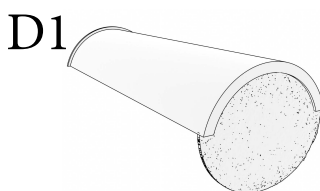

1 x

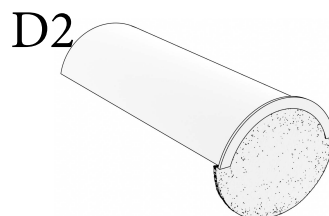

1 x

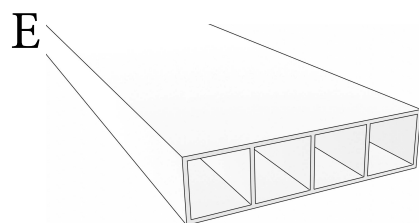

22x

E-5990 mm

11x

E-3472 mm


2x

E-2500 mm

4x


E-2340 mm

F

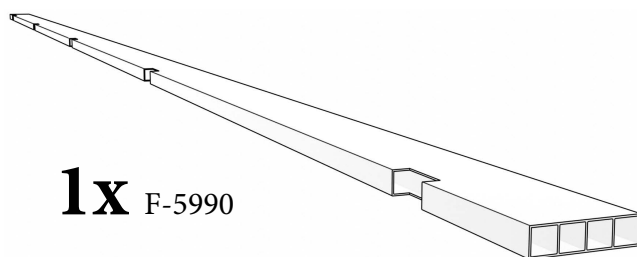

1x


F-5990

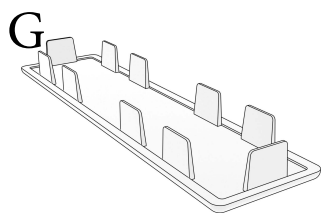

16 x




1 x

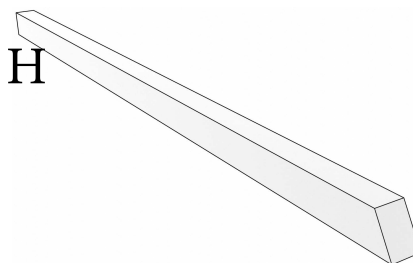


20x

2200 mm

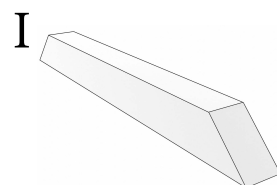

10x

800 mm

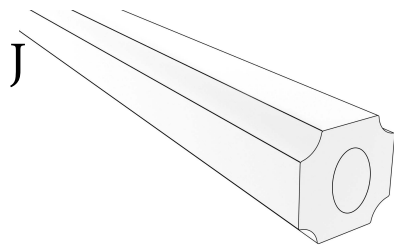


23x 5900 mm


20x 3430 mm

4x 2450 mm

8x 2300 mm

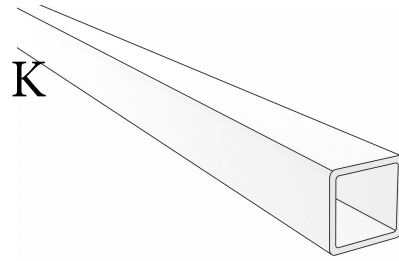


6 x 5900 mm

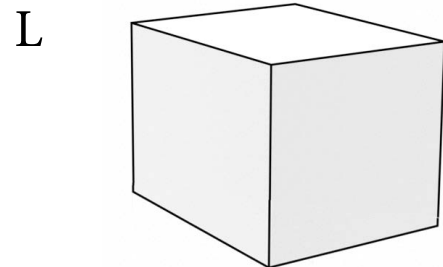


86x70x70

5 x

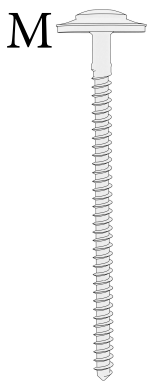


15 x 4,5 x 100


N



340 x 5 x 40



364 x 6 x 80




44 x 6 x 50

R





35 x 7 x 160

S




20 x 8 x 160

1

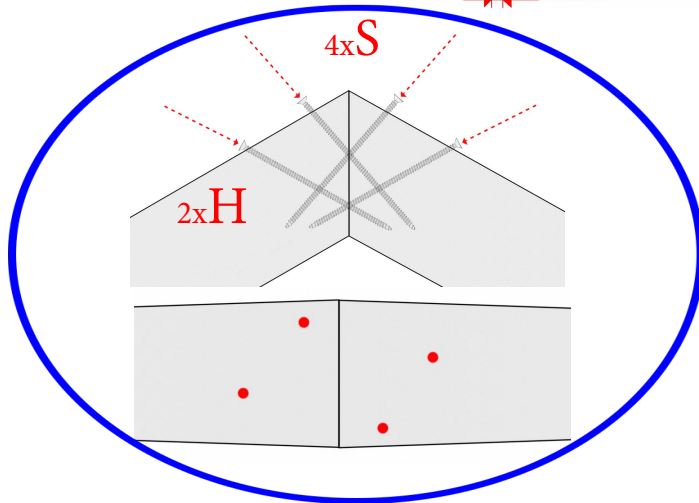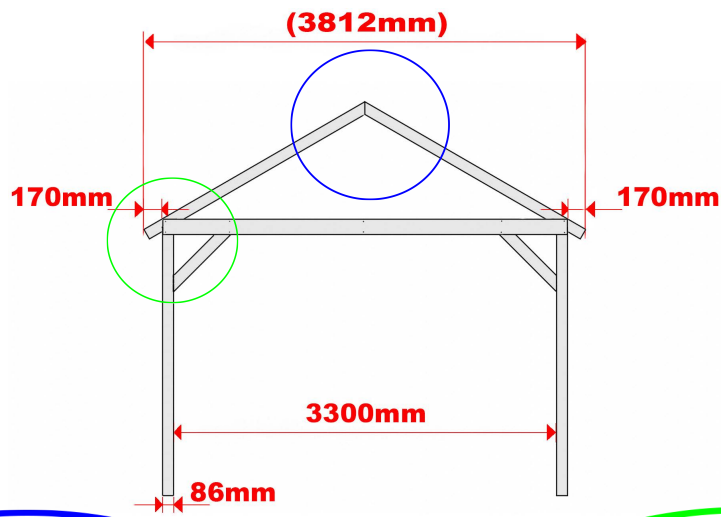


5 mal

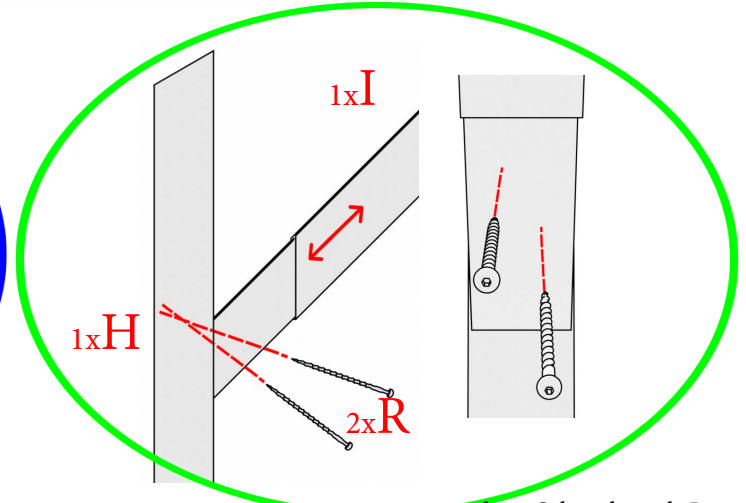


10 mal


diese Schrauben als Letztes in Schritt 1 festschrauben

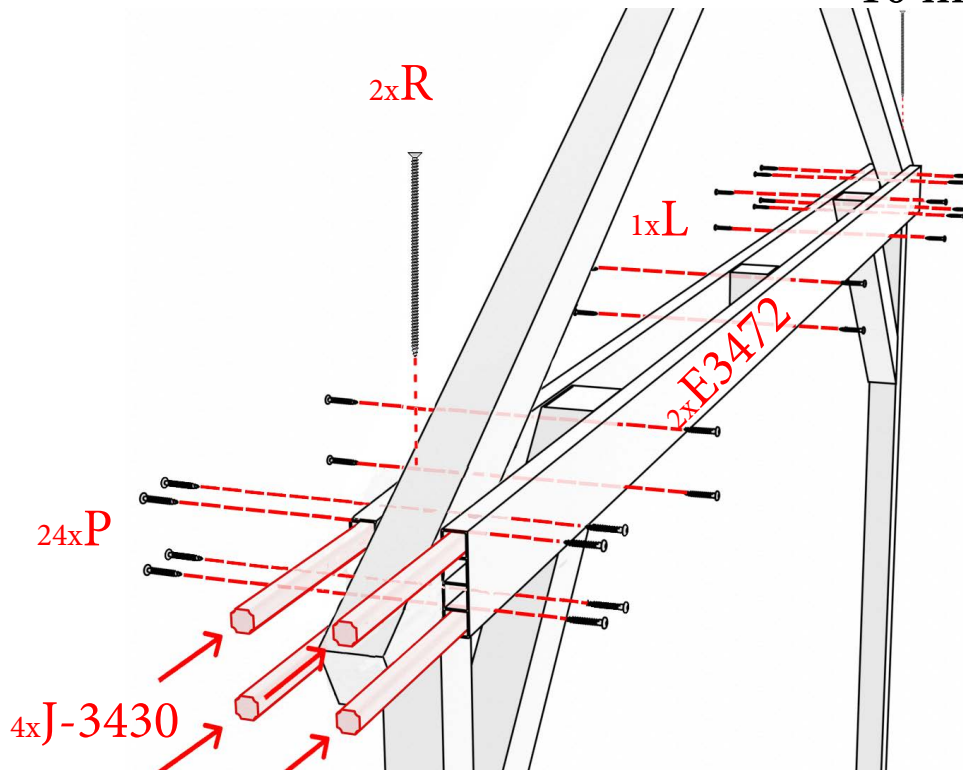




5 mal

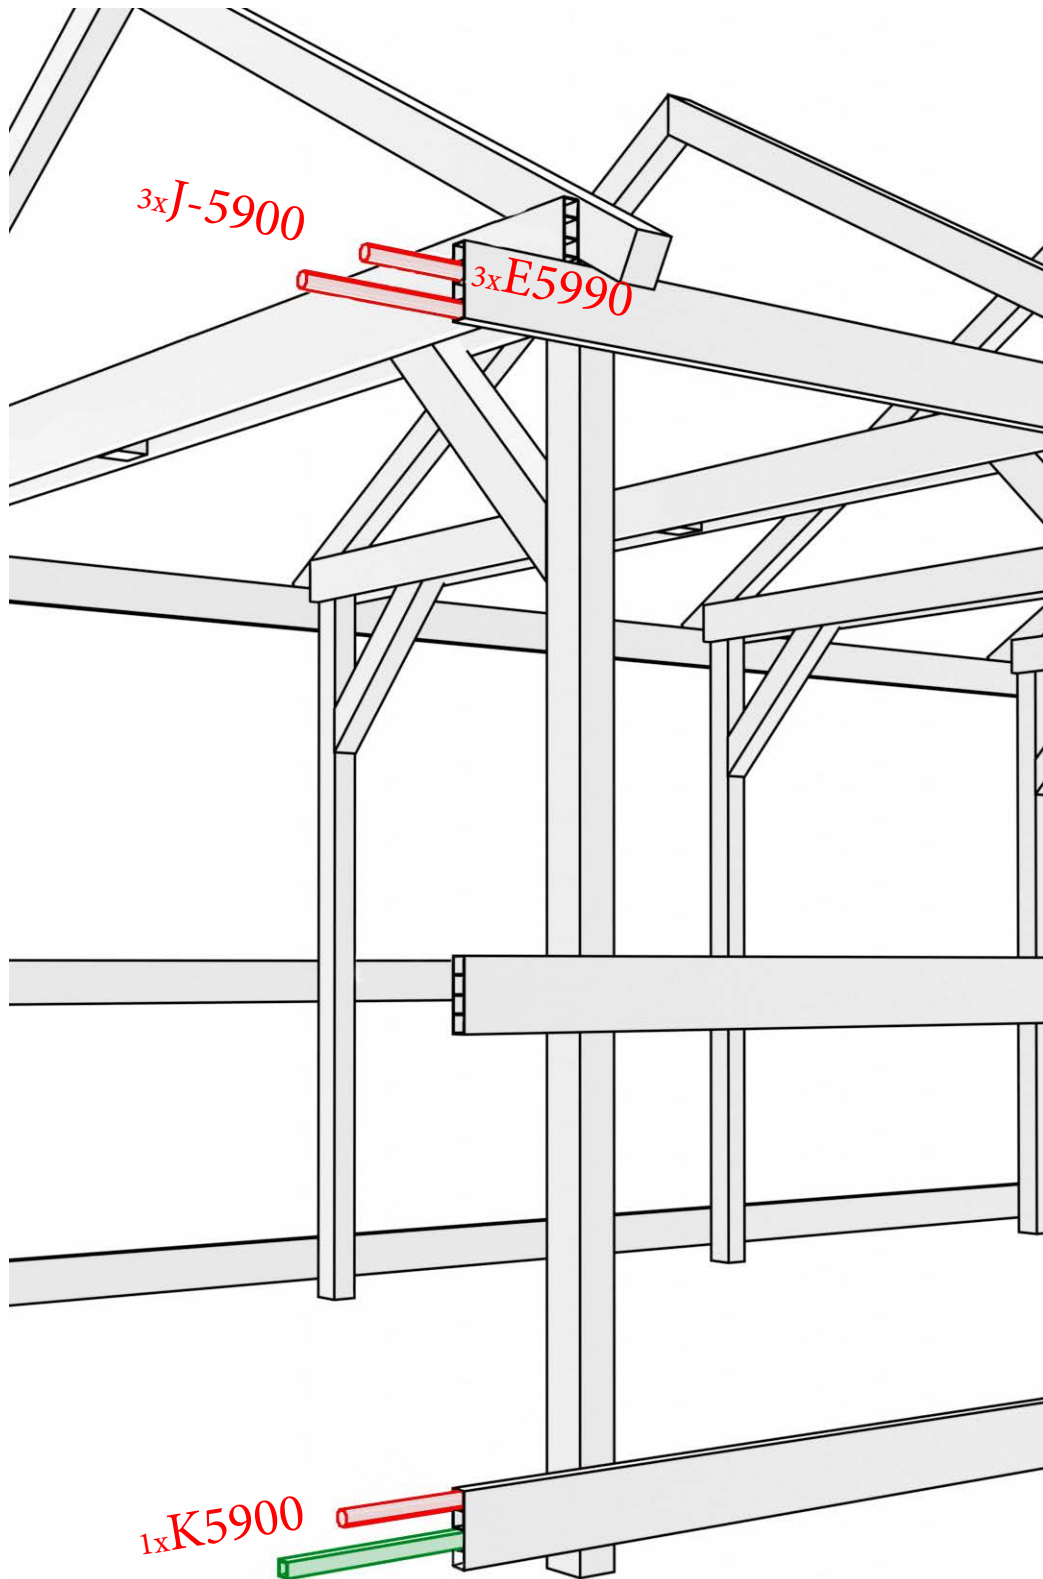

Teile J, K und E auch für die gegenüberliegende Seite vorbereiten.


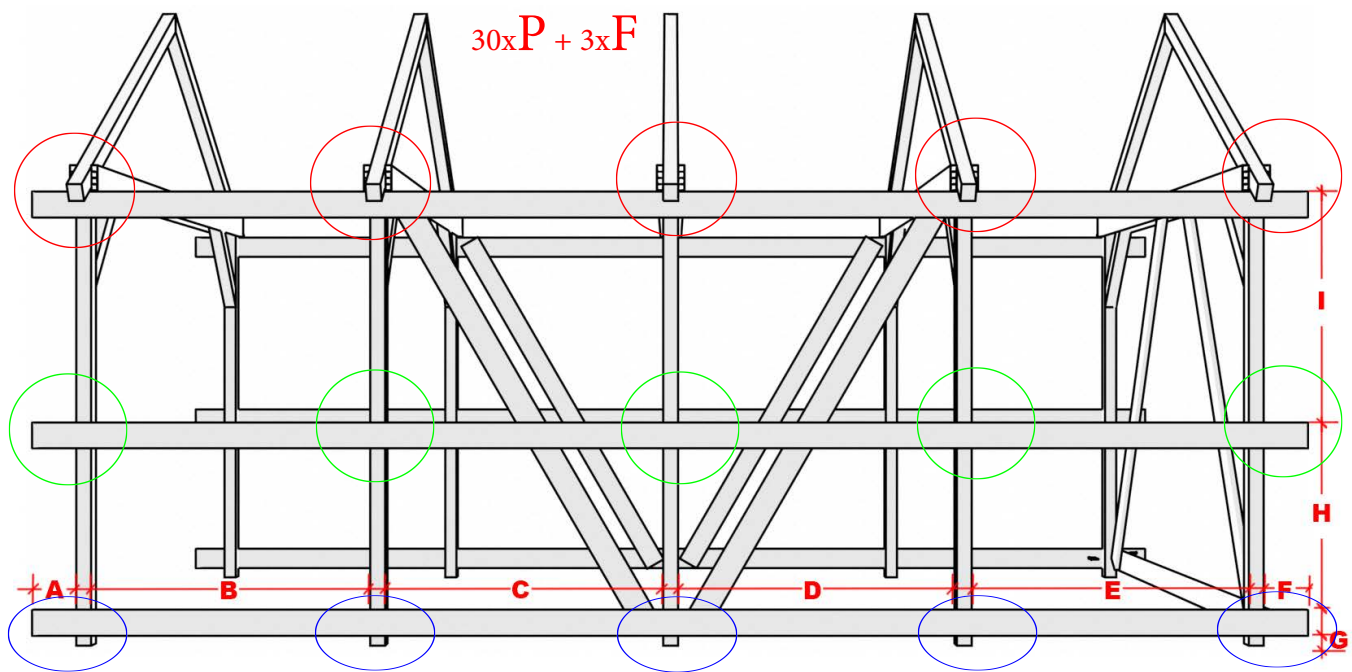


A=F= 200 mm
 B=C=D=E= 1310 mm
 G= 50 mm
 H=I

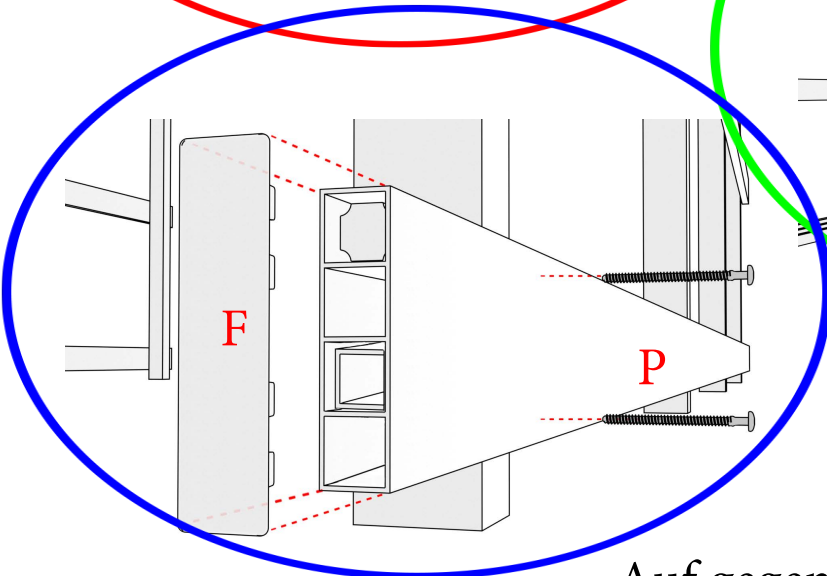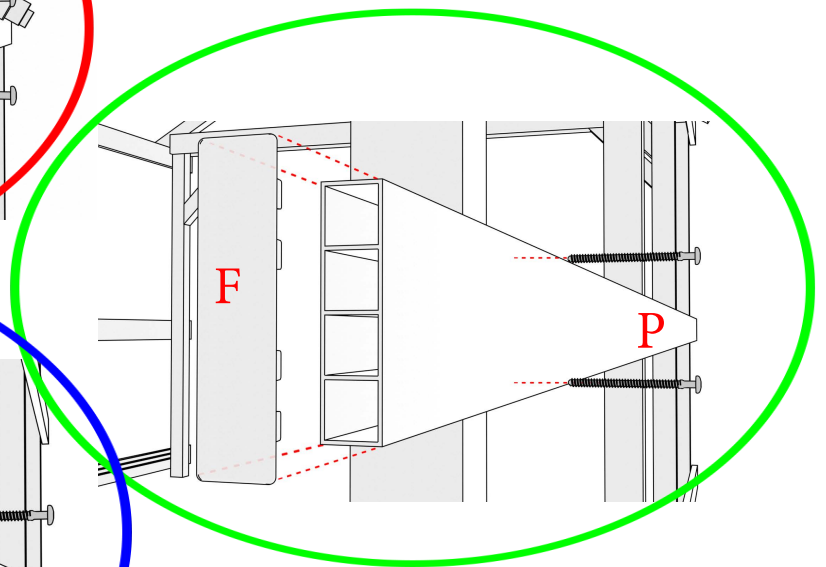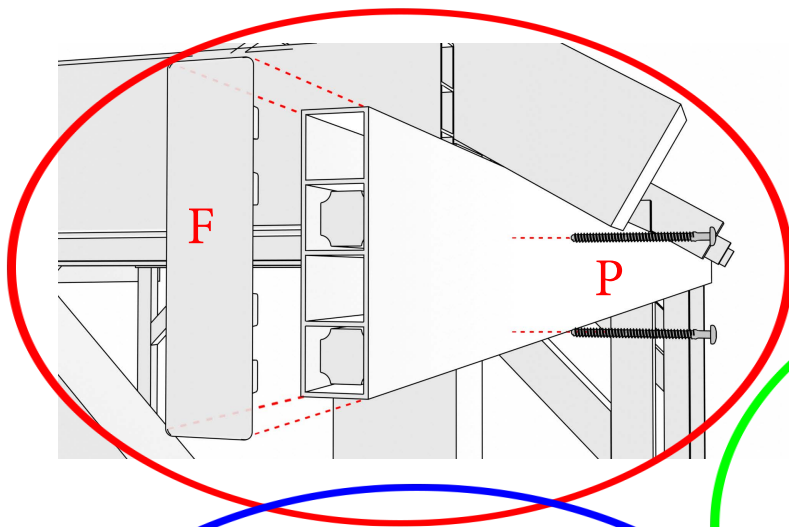


Auf gegenüberliegender Seite wiederholen.


Rückansicht

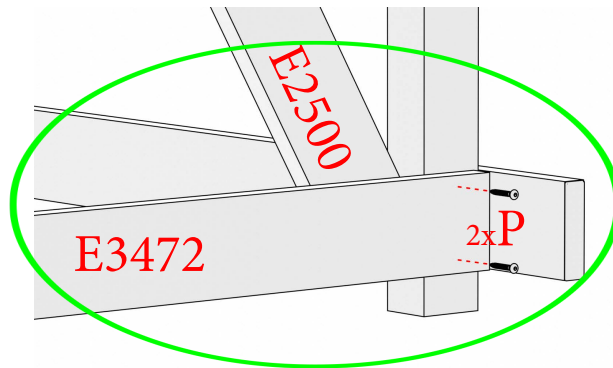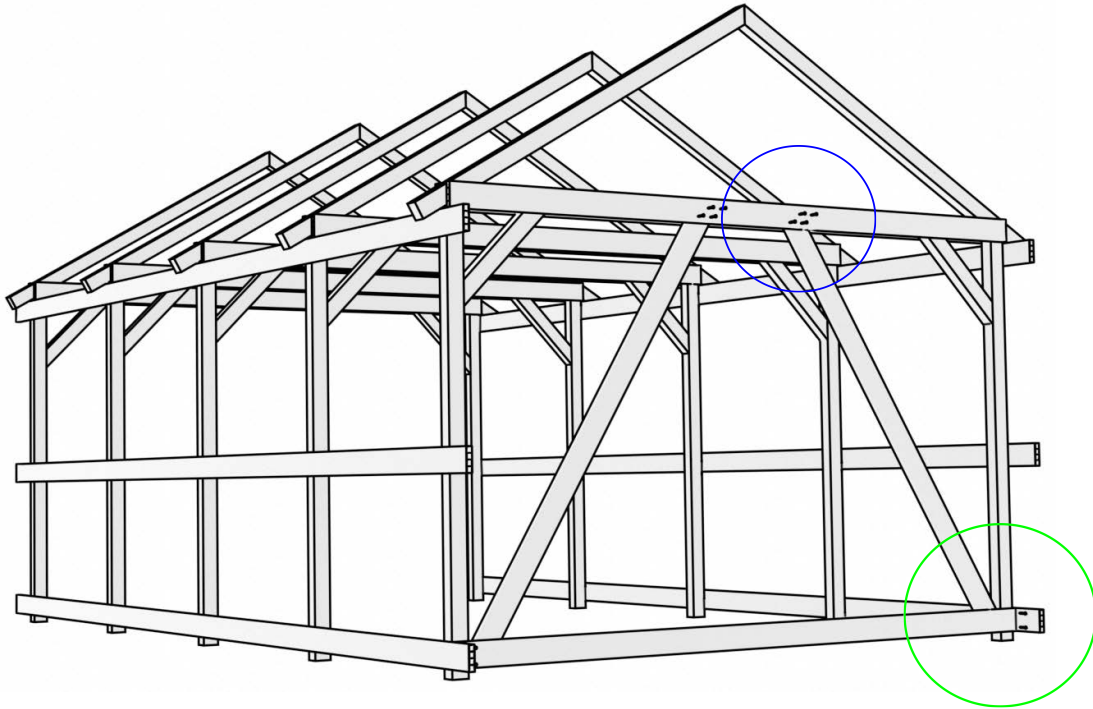





Schnitt

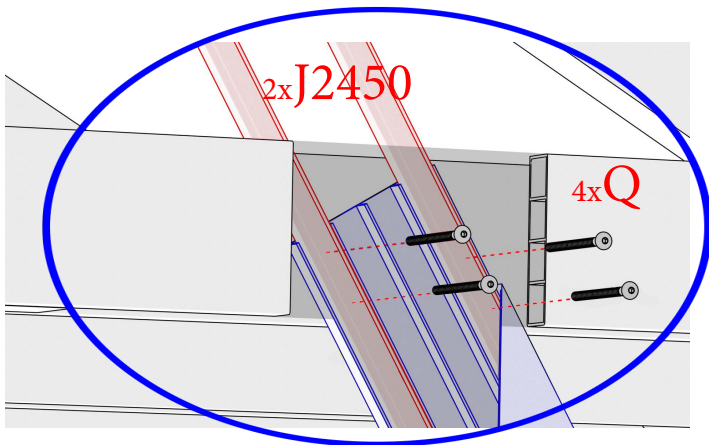


Innenansicht

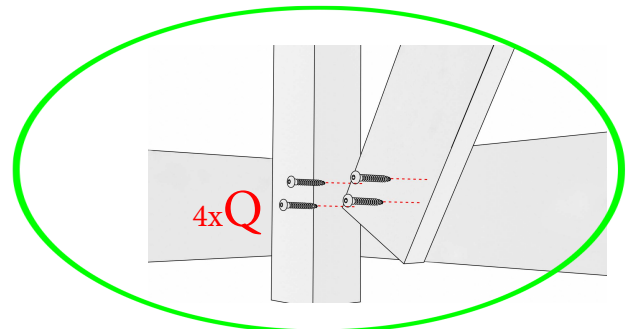



An gegenüberliegender Seite wiederholen

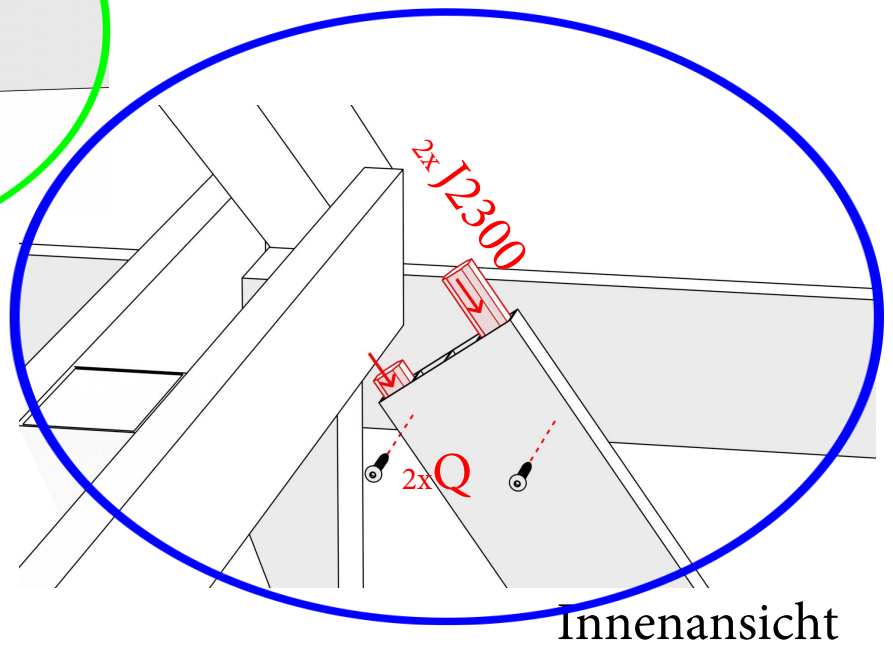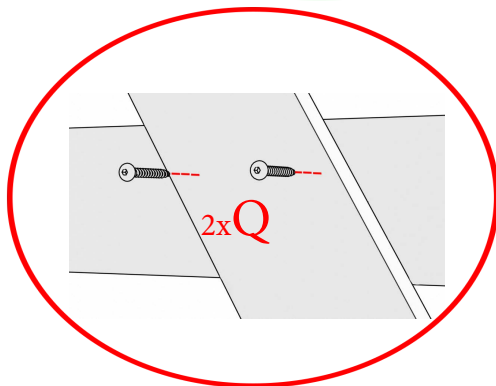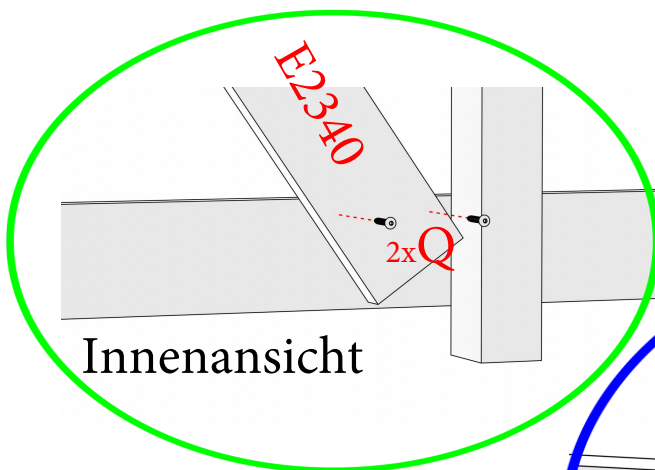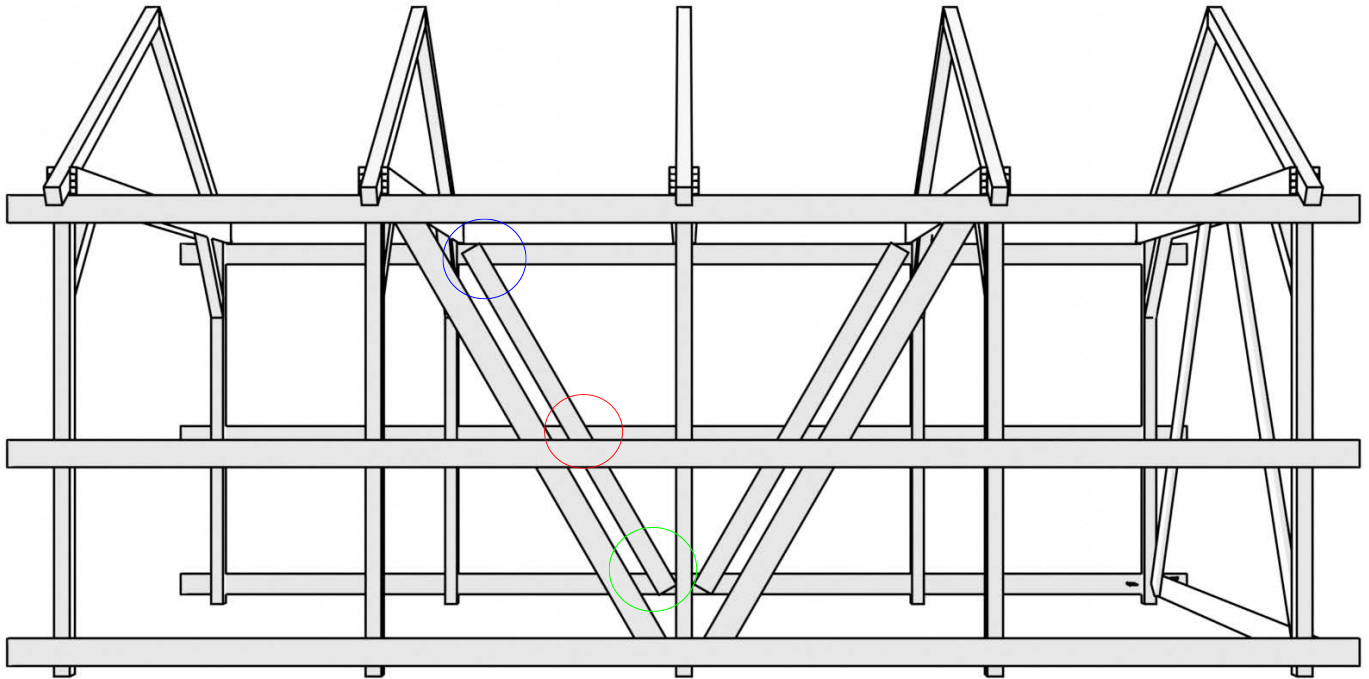






Diesen Schritt an den restlichen drei Diagonalen wiederholen.

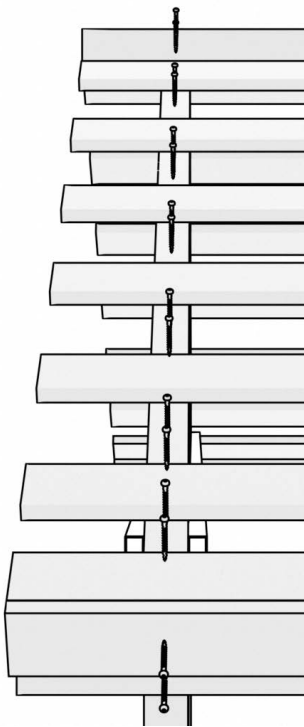



TIPP: für die Abstände 120 bzw. 240, 1 bzw. 2 Stücke Profile als Abstandhalter nutzen.

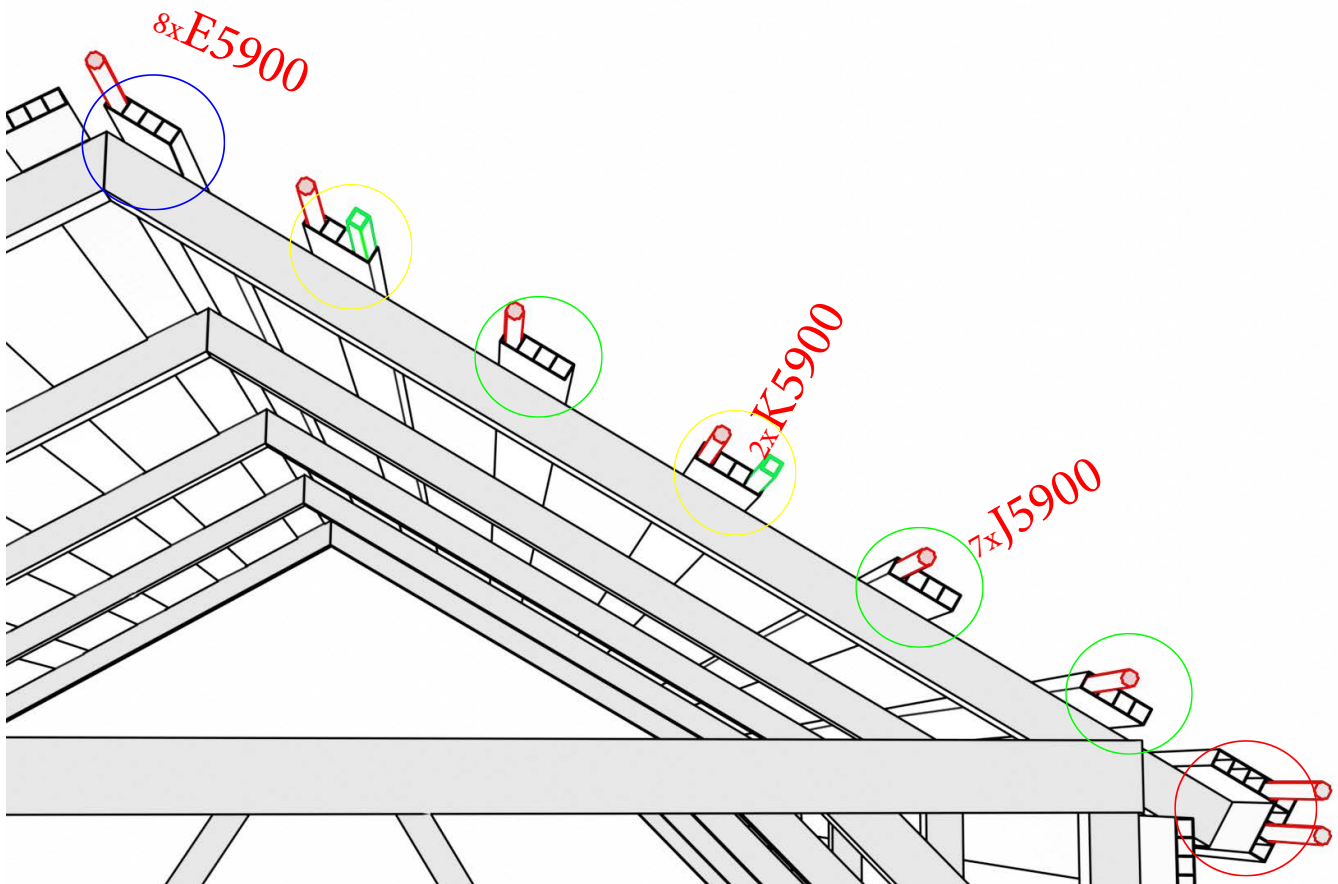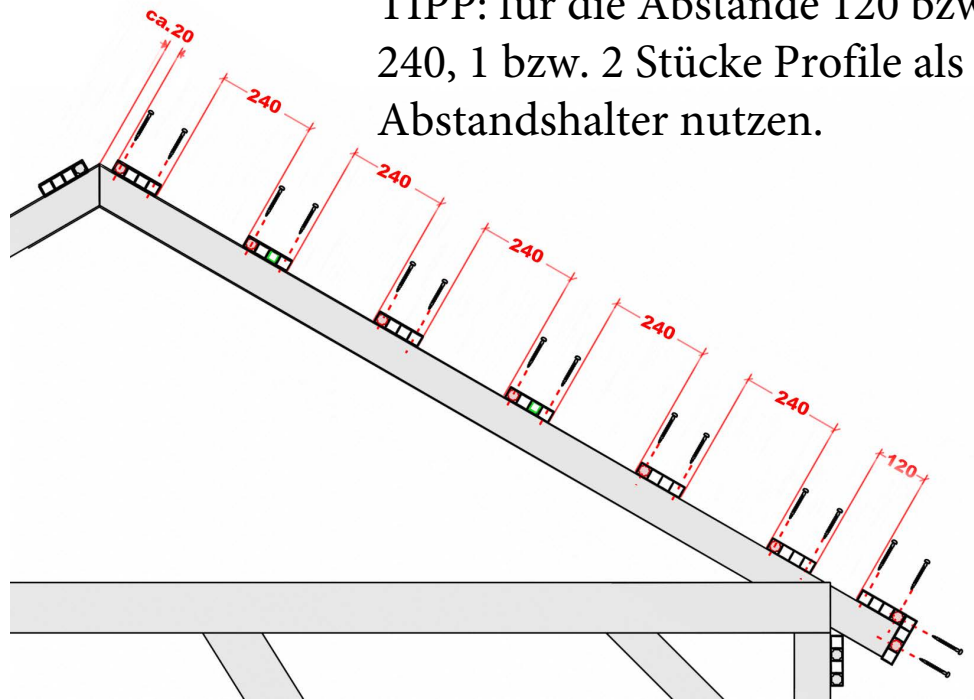



für die linke Seite wiederholen

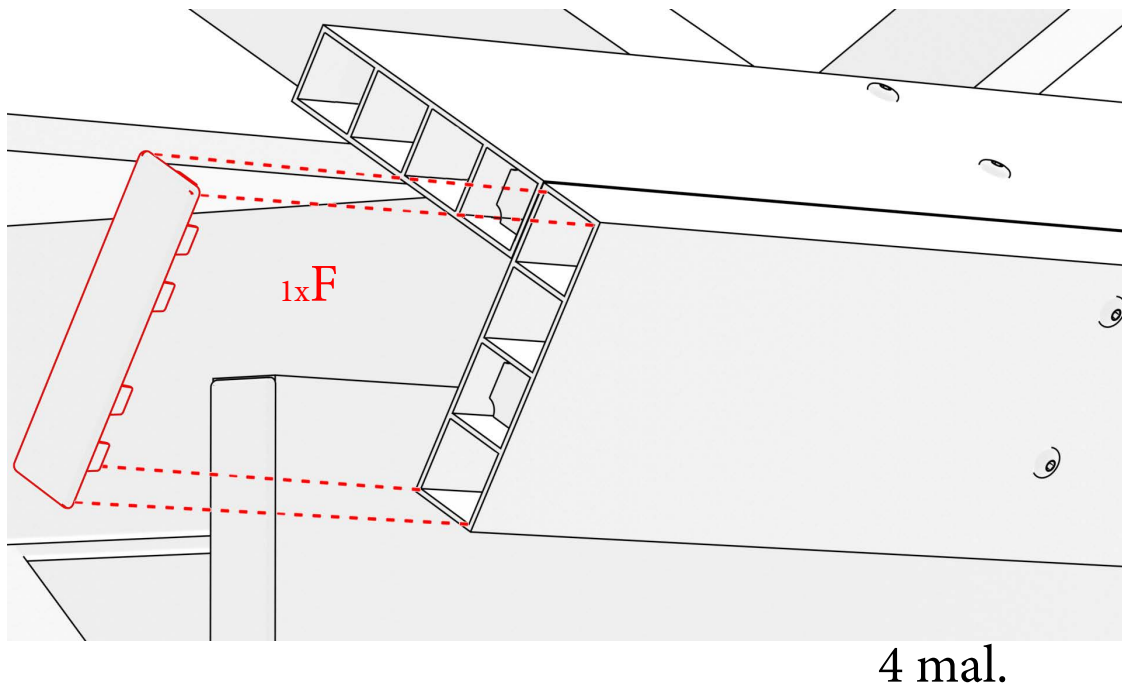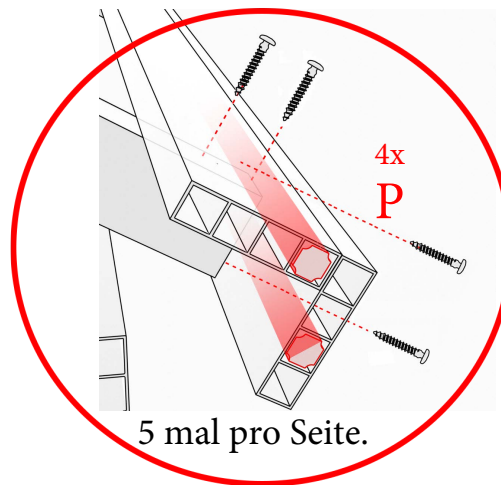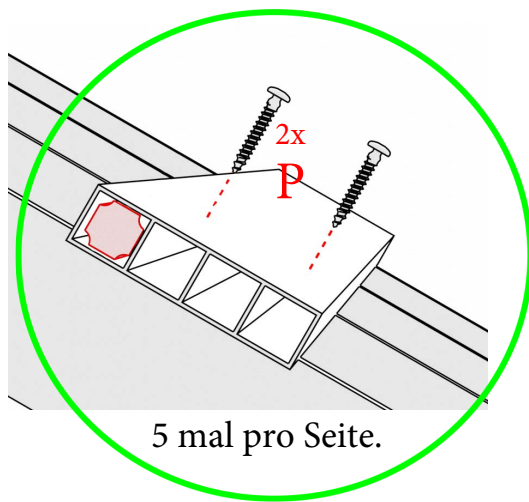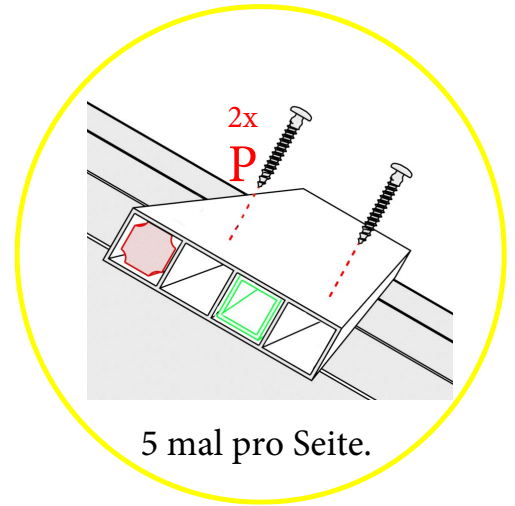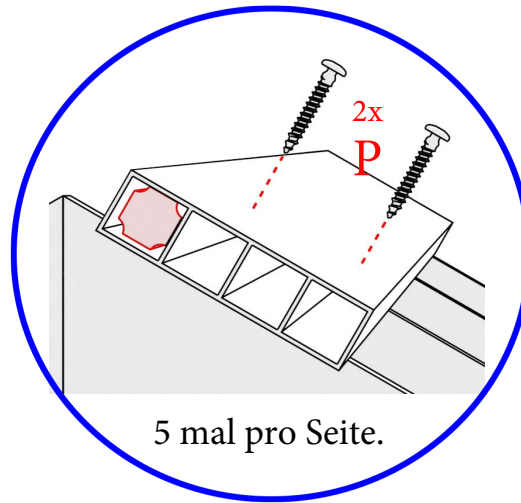


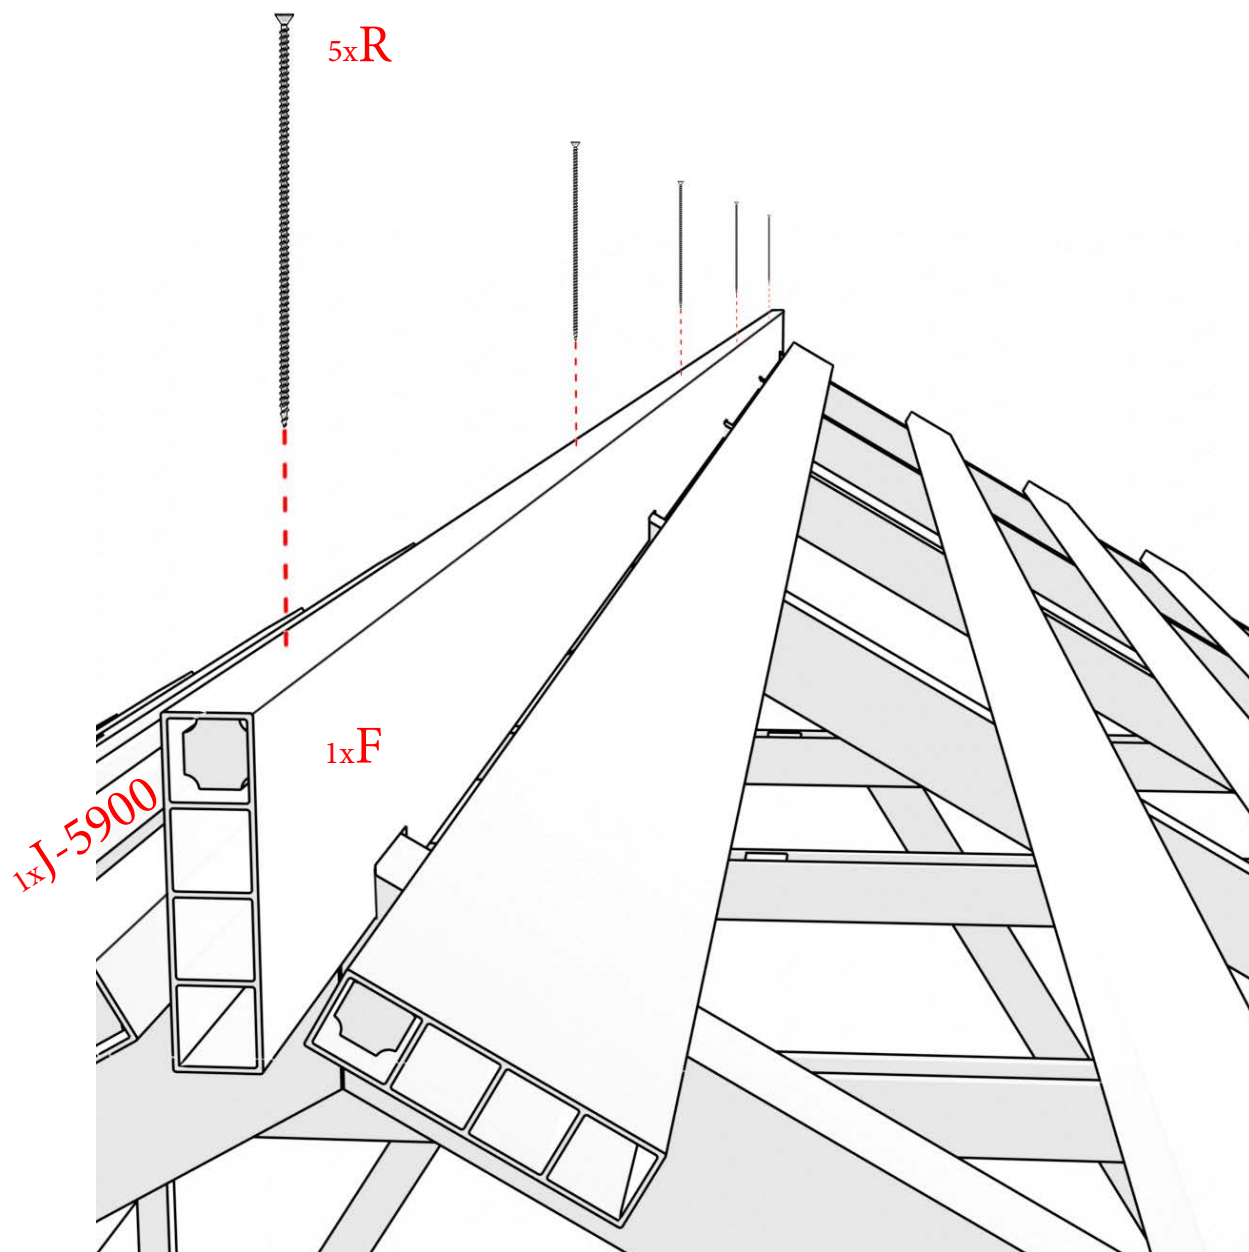

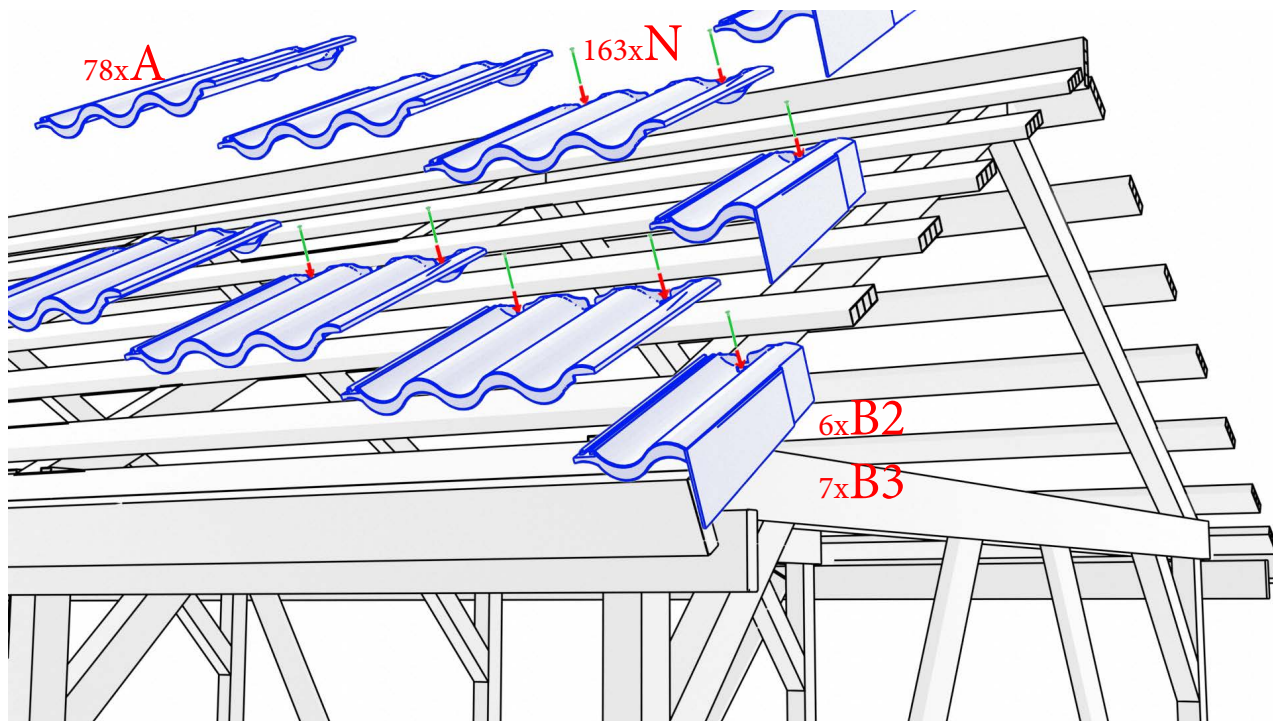


Detailbilder Ortgang

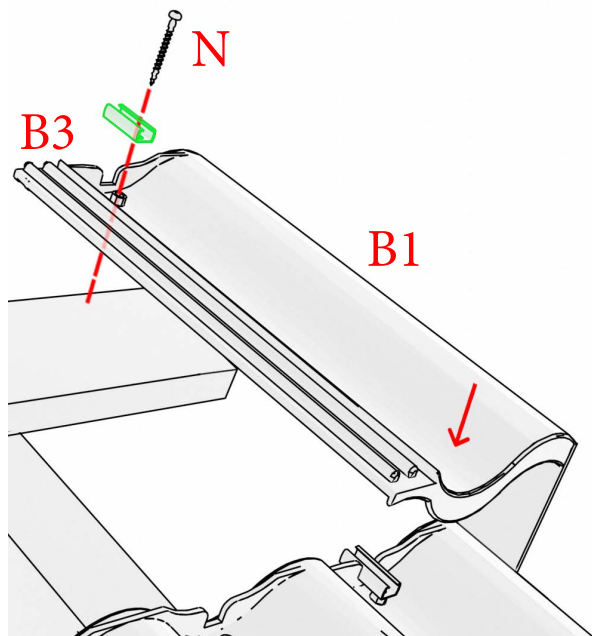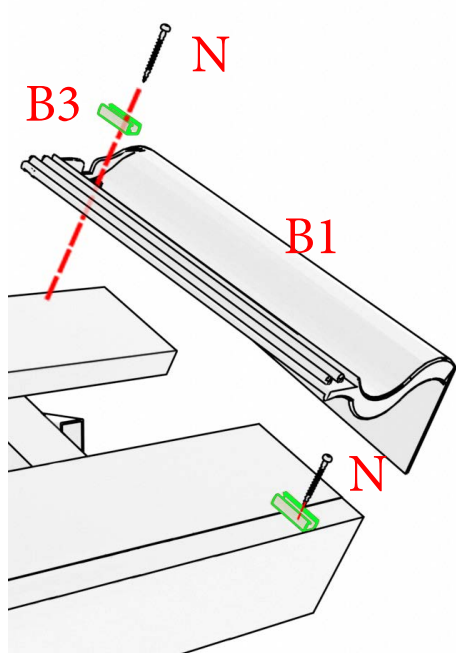

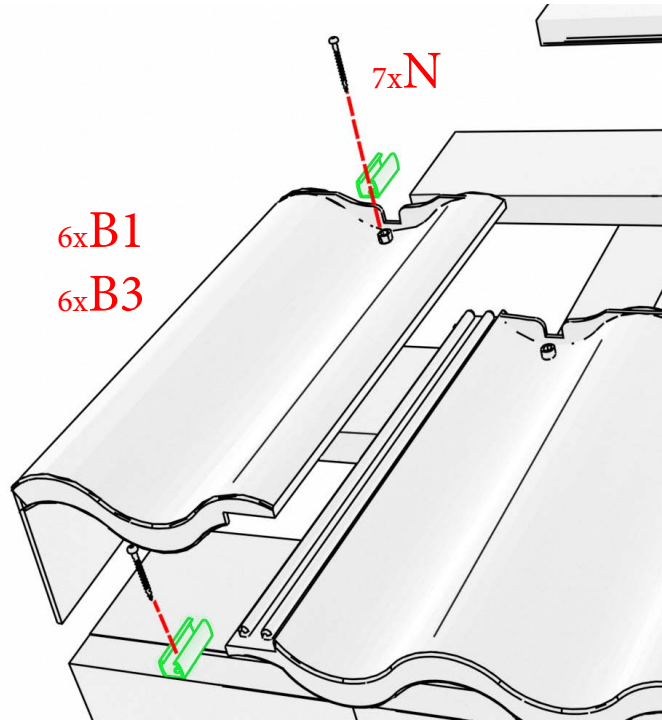

Schritt 6 auf gegenüberliegender Seite wiederholen.

7

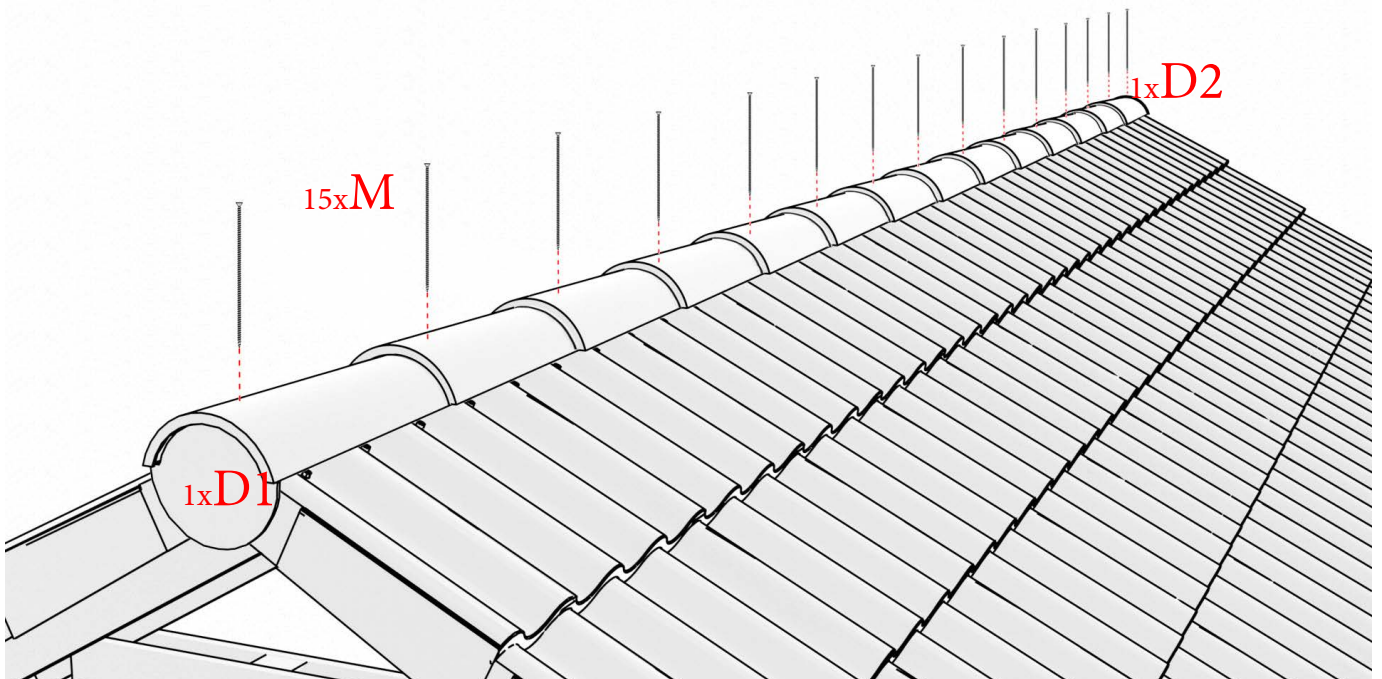

Fertig